

<b>Actuator Specifications</b>	РВО		
Torque "lb/Nm	1150"lbs/130Nm		
Supply Voltage	24vac/dc	120vac	230vac
Max Inrush Current	19.0A	11.0A	5.6A
Running Current	9.0A	3.8A	2.1A
Motor	DC Brush Type	Split Phase	e Capacitor
Runtime (90°@60Hz/vdc)	8.0 sec	7.0 sec	
Runtime (90°@50Hz)	8.0 sec	9.0	sec
Runtime (spring)	3.0 sec	8.0	sec
Duty Cycle	50%		
Motor Starts	300 per hour		
Weight	184lbs / 84kg		
Mechanical Connections	ISO5211 F10 8pt 22mm		
Electrical Entry	(2) 3/4" NPT		
Electrical Terminations	12-16ga		
Environmental Rating	NEMA 4/4X		
Manual Override	11.6" Handwheel		
Control	On/Off	On/Off, Pr	roportional
Actuator Case material	Aluminum Alloy, Powder coated		
Motor Protection	230°F/110°C Thermal F* Class		
	*Totally Enclosed Non-Ventilated Motors		
Ambient Temperature	-22°F to +149°F		
Operating Range	-30°C to +65°C		

Data Sheet

# **PBO Series**

w/ Manual Override ISO5211 F10 8P22

**High Temperature** Applications (-T59)

Standard, Monitor (-MTC) and Bypass (-BTC) Thermal Circuit Options



#### This version has a manual override

ProMation Engineering SPRING RETURN electric actuators with the -T59 suffix are specifically designed for use in tunnel applications. They have been third party tested for use up to two hours at 250°C (482°F) with a thermal protection blanket and up to one hour at 150°C (302°F). The actuator comes standard with two auxiliary switches (Form C) and internal low power heater.

The standard version has a thermal protection circuit that interrupts power to the motor when the internal wiring temperature reaches 125°C. The motor resumes operation after the internal temperature drops below 115°C.

The -MTC configuration uses a form C thermo-switch to monitor the temperature and will change state from normally closed at 125°C returning to normally closed when the motor temperature drops below 115°C. The motor will not cease functioning at high temperatures. Catastrophic damage to the motor can then occur. Motors are not warranted in the -MTC configuration.

The -BTC configuration has a form C bypass circuit in parallel with the motor thermo-switch. When the bypass circuit is open, the motor thermal protection circuit is functional and interrupts power to the motor when the motor temperature reaches 125°C. The motor resumes operation after the internal temperature drops below 115°C. When the bypass circuit is closed, the motor thermal protection circuit is not functional and the motor will not cease functioning at high temperatures. Catastrophic damage to the motor can then occur. Motors are not warranted in the -BTC configuration.

### Theory of Operation

While power is present, the actuator will respond to drive control signals depending on the model chosen.

**A2 position (on/off) unit** will drive until it reaches the full end of travel setting opposite the spring return direction.

A Proportional control unit will follow an analog control signal for positioning and will HOLD until a modified control signal is received.

**In each of these models** a motor brake unit is utilized to HOLD the actuator in position until commanded to move OR a loss of supply voltage.

If power is lost or removed at any time, the brake is released and the mechanical spring mechanism returns the actuator to its normal (unloaded) position. Once the spring mechanism has been released, the actuator will not drive under power again until all criteria are met:

- a) The unit has reached its fail stop (unloaded) position,
- b) Power has been restored to the actuator.
- c) Initial Power Startup time delay has elapsed



Not all versions of spring return actuators are CSA certified to CSA and UL standards Application requirements will dictate whether to utilize a CW (clockwise spring return) or CCW (counter-clockwise spring return) model.

Spring return direction is <u>NOT</u> changeable and actuator must be configured for spring return direction at time of order.


\* Duty cycle is affected by ambient temperature, supply voltage and control signal stability

Spring Return Series Exploded View

(Override Unit, Typical)


CAUTION! Internal Springs are under EXTREME compression and must NOT be altered or modified under any circumstances. DO NOT REMOVE END CAP SCREWS. Failure to comply with this warning could cause severe bodily injury and voids any liability or warranty

MISE EN GARDE! Les ressorts internes sont soumis à une compression EXTRÊME et ne doivent en aucun cas être modifiés ou modifiés. N'ENLEVEZ PAS LES VIS DE CAPUCHON. Le nonrespect de cet avertissement peut causer des blessures corporelles graves et annule toute responsabilité ou garantie

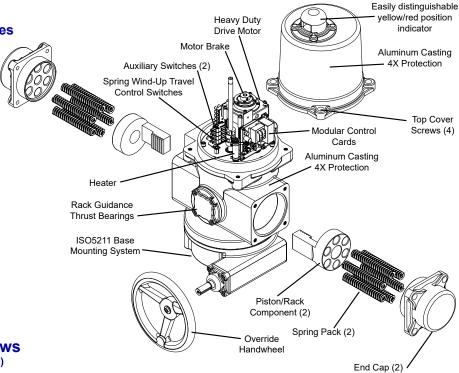



## PBO Series Views (CW Version shown)




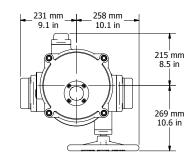


264 mm

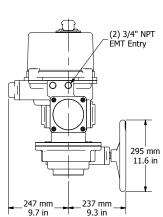

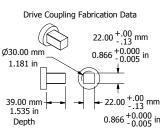

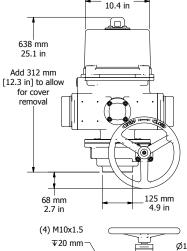

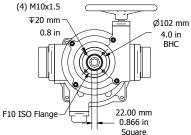

#### **Application Notes:**

- These actuators are designed to be used between a horizontal or upright position. Do NOT mount the actuator with the top below a horizontal position.
- When installing conduit, use proper techniques for entry into the actuator. Use drip loops to prevent conduit condensate from entering the actuator.
- Both NPT conduit ports MUST use proper equipment to protect the NEMA 4X integrity of the housing.
- 4. The internal heater is to be used in ALL applications.
- Do NOT install or store the actuator outdoors or in humid environments unless it is powered up and the heater is functioning.
- 6. Use proper wire size to prevent actuator failure (see chart below for proper wire sizing).
- Mechanical travel stops are factory calibrated for 90 degree operation. These stops are NOT designed to adjust mechanical rotation by more than +/- 3 degrees.

#### **Spring Pack Notes:**

A modular cast aluminum housing incorporates the mechanical drive train, the spring pack and rack assemblies, the output drive shaft, motor and control section.

The spring pack is NOT field serviceable. Spring failure direction mode (CW or CCW) <u>must be selected</u> at time of order.

Page 2 of 4 PBO Spring Return Series

#### **Wiring Diagrams for PBO Series**

#### **Standard Configuration**

On/Off (2 Position) control is used for damper or valve applications where the requirement is for either fully open or fully closed positioning.

This actuator must drive to its end of travel opposite the spring fail position. Loss of control signal or power before reaching its end of travel will cause the unit to spring return.

- Field Control Device may be relay contact, Switch or Triac type.
- · Pilot device 10A MAX.
- Auxiliary switches are rated 10A @ 250vac MAX.
- · Terminals A-F are dry type Form C.
- · Terminals accept 12-16ga solid/stranded wire.


#### 0° - 5° \* BLK **AUXILIARY** 5° - 90° 8 SWITCH (STANDARD) AS4 COM\* D 85° - 90° С AUXILIARY В BLU SWITCH (STANDARD) AS3 COM \* \* CONNECTIONS OPTIONAL 15W 1K8 **HEATER X** WHT16 6 M 8 120/230:24VDC DCPS **FIELD** 5 $(\mathbb{X})$ CONTROL **DEVICE** LS2 <sup>™</sup> 8 LOAD COM RED CAM **%** GRY22 NON POLARIZED BLU16 @ $\| \otimes \|$ J2 Ø GND Screw $\Theta$ Ø GND LS1 JЗ

**On/Off Control** 

#### -MTC Configuration

Terminals 6 and 5 are dry type Form C contacts that monitor the motor temperature. The motor thermo-switch is normally closed and will change state to open at 125°C. The contact returns to closed when the motor temperature drops below 115°C. The motor will not cease functioning at high temperatures. Catastrophic damage to the motor can then occur.


Motors are not warranted in the -MTC configuration.

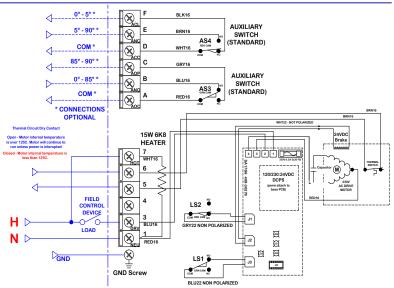

#### -BTC Configuration

Terminals 6 and 5 are dry type Form C contacts that are in parallel with the motor thermo-switch. When the bypass circuit is open, the motor thermal protection circuit is functional and interrupts power to the motor when the motor temperature reaches 125°C. The motor resumes operation after the internal temperature drops below 115°C. When the bypass circuit is closed, the motor thermal protection circuit is not functional and the motor will not cease functioning at high temperatures. Catastrophic damage to the motor can then occur.

Motors are not warranted in the -BTC configuration.

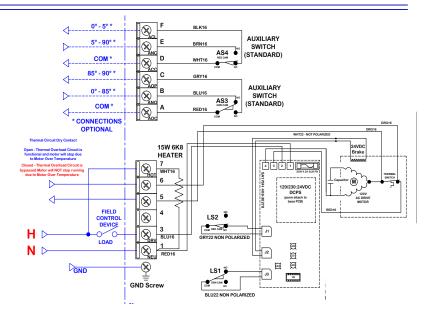



#### Wire Sizing Chart


	MAX distance between Actuator and Supply (feet)			
Actuator/ Voltage	PBO 24VAC	PBO 120VAC	PBO 230VAC	
Amps Wire Gage	19.0A	11.0A	5.6A	
16	-	1	444	
14	-	191	718	
12	34	292	1098	
10	57	496	1867	
8	86	740	2786	

Wire sizing data is provided in this table to assist in the selection of the proper wire size for ProMation Spring Return actuators using various wire sizes over distance.

Please make sure to reference the correct voltage and do not exceed the indicated length of the wire run for each model.

Motor thermal circuits do not impact wire sizing

### **Product Ordering Example:**

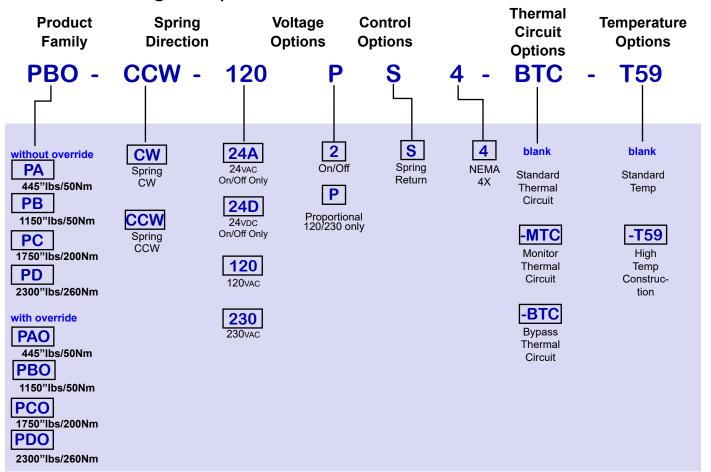

ProMation Engineering follows a policy of continual product updates and enhancements. Our website is the best place to obtain the latest product documentation, including the wiring diagrams for these controllers. Visit us at www.promationei.com or use the QR code below to link to the site.



16138 Flight Path Drive Brooksville, FL 34604 Phone (352) 544-8436 Fax (352) 544-8439 email: sales@promationei.com



Use your smart phone barcode scanner app here.