

Actuator Specifications	PA		
Torque "lb/Nm	445"lbs/50Nm		
Supply Voltage	24vac/dc	120vac	230vac
Max Inrush Current	4.0A	2.0A	1.3A
Running Current	3.0A	1.0A	0.7A
Motor	DC Brush Type	Split Phase	e Capacitor
Runtime (90°@60Hz/vdc)	7.0 sec	7.0 sec	
Runtime (90°@50Hz)	7.0 sec	9.0	sec
Runtime (spring)	3.0 sec	3.0	sec
Duty Cycle	50%		
Motor Starts	300 per hour		
Weight	65lbs / 30kg		
Mechanical Connections	ISO5211 F07 8pt 17mm		
Electrical Entry	(2) 3/4" NPT		
Electrical Terminations	12-16ga		
Environmental Rating	NEMA 4/4X		
Manual Override	None		
Control	On/Off	On/Off, P	roportional
Actuator Case material	Aluminum Alloy, Powder coated		
Motor Protection	230°F/110°C Thermal F* Class *Totally Enclosed Non-Ventilated Motors		
Ambient Temperature	-22°F to +149°F		
Operating Range	-30°C to +65°C		

Data Sheet

PA Series w/o Manual Override ISO5211 F07 8P17 High Temperature Applications (-T59) Standard, Monitor (-MTC) and Bypass (-BTC) Thermal Circuit Options



This version does not have a manual override.

ProMation Engineering SPRING RETURN electric actuators with the -T59 suffix are specifically designed for use in tunnel applications. They have been third party tested for use up to two hours at 250°C (482°F) with a thermal protection blanket and up to one hour at 150°C (302°F). The actuator comes standard with two auxiliary switches (Form C) and internal low power heater.

The standard version has a thermal protection circuit that interrupts power to the motor when the internal wiring temperature reaches 125°C. The motor resumes operation after the internal temperature drops below 115°C.

The -MTC configuration uses a form C thermo-switch to monitor the temperature and will change state from normally closed at 125°C returning to normally closed when the motor temperature drops below 115°C. The motor will not cease functioning at high temperatures. Catastrophic damage to the motor can then occur. Motors are not warranted in the -MTC configuration.

The -BTC configuration has a form C bypass circuit in parallel with the motor thermo-switch. When the bypass circuit is open, the motor thermal protection circuit is functional and interrupts power to the motor when the motor temperature reaches 125°C. The motor resumes operation after the internal temperature drops below 115°C. When the bypass circuit is closed, the motor thermal protection circuit is not functional and the motor will not cease functioning at high temperatures. Catastrophic damage to the motor can then occur. Motors are not warranted in the -BTC configuration.

# Theory of Operation

While power is present, the actuator will respond to drive control signals depending on the model chosen.

A2 position (on/off) unit will drive until it reaches the full end of travel setting opposite the spring return direction.

A Proportional control unit will follow an analog control signal for positioning and will HOLD until a modified control signal is received. **In each of these models** a motor brake unit is utilized to HOLD the actuator in position until commanded to move OR a loss of supply voltage.

If power is lost or removed at any time, the brake is released and the mechanical spring mechanism returns the actuator to its normal (unloaded) position. Once the spring mechanism has been released, <u>the actuator will not drive under power again until all criteria are met:</u>

- a) The unit has reached its fail stop (unloaded) position,
- b) Power has been restored to the actuator.
- c) Initial Power Startup time delay has elapsed



Not all vesions of spring return actuators are CSA certified to CSA and UL standards Application requirements will dictate whether to utilize a CW (clockwise spring return) or CCW (counter-clockwise spring return) model.


# Spring return direction is <u>NOT</u> changeable and actuator must be configured for spring return direction at time of order.

\* Duty cycle is saffected by ambient temperature, supply voltage and control signal stability

## PA Series Dimensional Data

**CAUTION!** Internal Springs under EXTREME are compression and must NOT be altered or modified under any circumstances. DO NOT REMOVE END CAP SCREWS. Failure to comply with this warning could cause severe bodily injury and voids any liability or warranty


MISE EN GARDE! Les ressorts internes sont soumis à une compression EXTRÊME et ne doivent en aucun cas être modifiés ou modifiés. N'ENLEVEZ PAS LES VIS DE CAPUCHON. Le non-respect de cet avertissement peut causer des blessures corporelles graves et annule toute responsabilité ou garantie

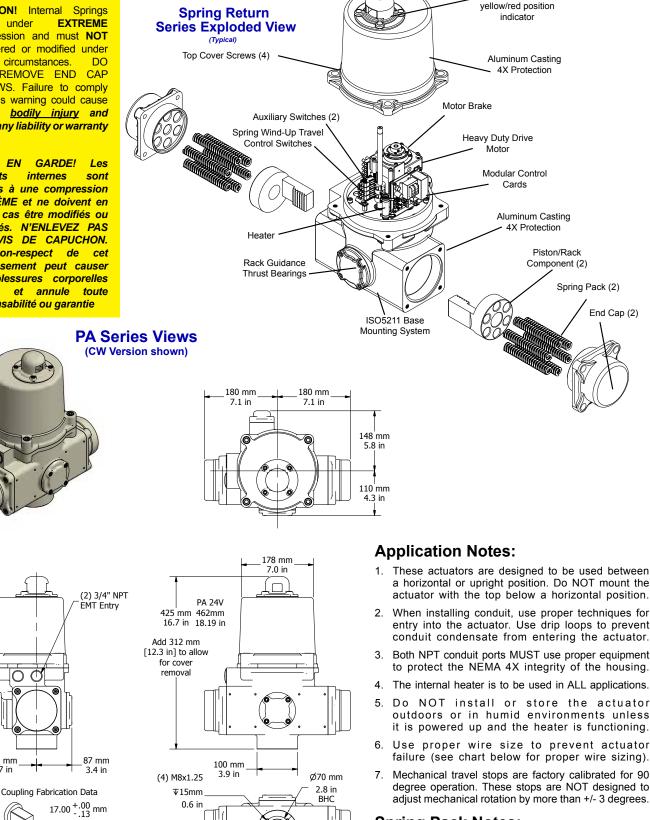


#### **Spring Pack Notes:**

A modular cast aluminum housing incorporates the mechanical drive train, the spring pack and rack assemblies, the output drive shaft, motor and control section.

The spring pack is NOT field serviceable. Spring failure direction mode (CW or CCW) must be selected at time of order.

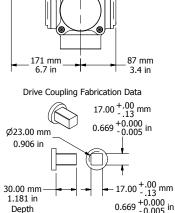

Depth

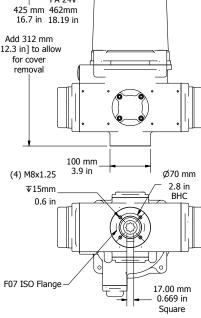

These actuators are designed to be used between a horizontal or upright position. Do NOT mount the actuator with the top below a horizontal position.

Easily distinguishable

- When installing conduit, use proper techniques for entry into the actuator. Use drip loops to prevent conduit condensate from entering the actuator.
- Both NPT conduit ports MUST use proper equipment to protect the NEMA 4X integrity of the housing.
- The internal heater is to be used in ALL applications.
- 5. Do NOT install or store the actuator outdoors or in humid environments unless it is powered up and the heater is functioning.
- 6. Use proper wire size to prevent actuator failure (see chart below for proper wire sizing).

Page 2 of 4 PA Spring Return Series

# Wiring Diagrams for PA Series

#### **On/Off Control**

#### **Standard Configuration**

On/Off (2 Position) control is used for damper or valve applications where the requirement is for either fully open or fully closed positioning.


This actuator must drive to its end of travel opposite the spring fail position. Loss of control signal or power before reaching its end of travel will cause the unit to spring return.


- Field Control Device may be relay contact, Switch or Triac type.
- Pilot device 10A MAX.
- Auxiliary switches are rated 10A @ 250vac MAX.
- Terminals A-F are dry type Form C.
- · Terminals accept 12-16ga solid/stranded wire.

#### -MTC Configuration

Terminals 6 and 5 are dry type Form C contacts that monitor the motor temperature. The motor thermo-switch is normally closed and will change state to open at 125°C. The contact returns to closed when the motor temperature drops below 115°C. The motor will not cease functioning at high temperatures. Catastrophic damage to the motor can then occur.

Motors are not warranted in the -MTC configuration.

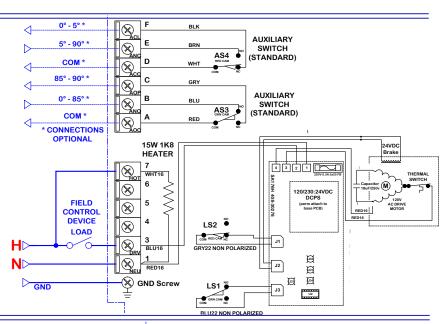


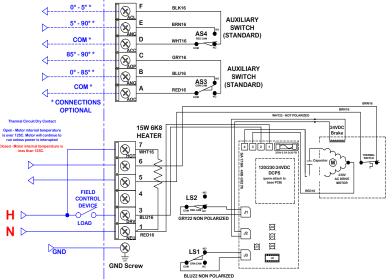

#### -BTC Configuration

Terminals 6 and 5 are dry type Form C contacts that are in parallel with the motor thermo-switch. When the bypass circuit is open, the motor thermal protection circuit is functional and interrupts power to the motor when the motor temperature reaches 125°C. The motor resumes operation after the internal temperature drops below 115°C. When the bypass circuit is closed, the motor thermal protection circuit is not functional and the motor will not cease functioning at high temperatures. Catastrophic damage to the motor can then occur.

Motors are not warranted in the -BTC configuration.

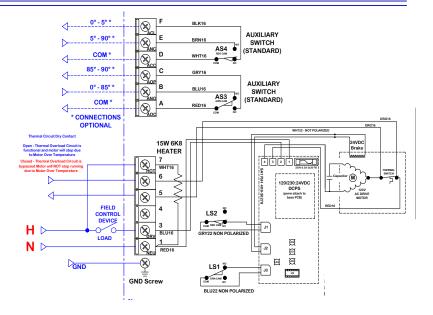



	MAX distance between Actuator and Supply (feet)			
Actuator/ Voltage	PA 24VAC	PA 120VAC	PA 230VAC	
Amps Wire Gage	4.0A	2.0A	1.3A	
16	65	649	1915	
14	105	1049	3093	
12	160	1604	4731	
10	273	2727	8042	
8	407	4071	12003	


#### Wire Sizing Chart

Wire sizing data is provided in this table to assist in the selection of the proper wire size for ProMation Spring Return actuators using various wire sizes over distance.

Please make sure to reference the correct voltage and do not exceed the indicated length of the wire run for each model.

Motor thermal circuits do not impact wire sizing

## **Product Ordering Example:**

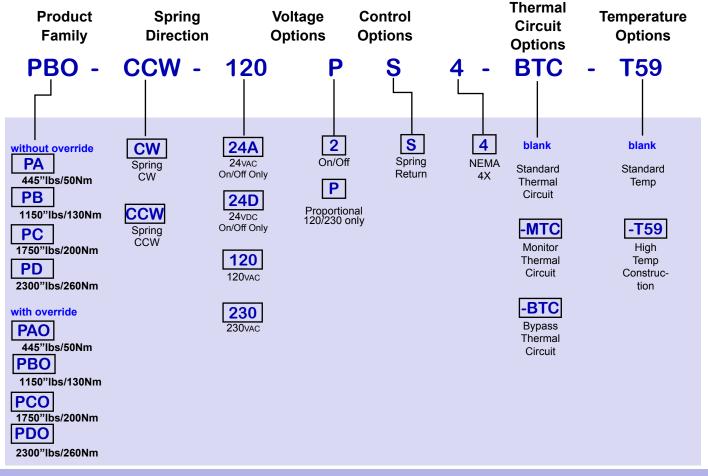

ProMation Engineering follows a policy of continual product updates and enhancements. Our website is the best place to obtain the latest product documentation, including the wiring diagrams for these controllers. Visit us at www.promationei.com or use the QR code below to link to the site.



16138 Flight Path Drive Brooksville, FL 34604 Phone (352) 544-8436 Fax (352) 544-8439 email: sales@promationei.com



Use your smart phone barcode scanner app here.

Page 4 of 4 PA Spring Return Series